

Press the **SETTING** button on the motor head for 1 SEC
The blind will jog once.

Press the **UP** button on the remote, the blind will jog once.

At this stage the remote/channel and motor is paired.

STEP 4 - CHECK THE ROLLING DIRECTION

Press the **UP** button on the remote

If the blind moves up, go to **STEP 5**. If the blind moves down you will need to reverse the rolling direction of the blind:

Press the **STOP** button on the remote for 5 SEC, the blind will jog once.

Press the **DOWN** button on the remote, the blind will jog once.

At this point the rolling direction has been changed.
Press the **UP** button to ensure the blind moves up.

SETTING THE LIMITS

STEP 5 - SET THE TOP LIMIT

Press the **PROGRAM** button on the back of the remote for 1 SEC
The blind will jog once.

Move blind into the open position by pressing the **UP** button,
(the movement will be a micro movement)
For continuous movement, press and hold the **UP** button
push **STOP** when it is in the required open position and micro adjust
if required.

NB: Press the **PROGRAM** button on the back of the remote again for 1 SEC
The blind will jog once.

The top limit is now set.
(Please note: This top limit can only be deleted by restoring the motor to
factory default - STEP 12)

FOR GROUP CONTROL

Select the channel you want to use for your group.

Press **CHANNEL+** or **CHANNEL-** to choose the channel.

Your chosen channel will illuminate **BLUE** on the remote channel display.

For this example we will pick CHANNEL 4 as our group channel
(BLIND 1, BLIND 2 AND BLIND 3 will operate together on CHANNEL 4)

To program BLIND 1, follow STEP 10
Once complete, power off BLIND 1 (STEP 1)

To program BLIND 2, follow STEP 10
Once complete, power off BLIND 2 (STEP 1)

To program BLIND 3, follow STEP 10

Power on BLIND 1 and 2 (STEP 1)

EXAMPLE




CHANNEL 1 is paired with BLIND 1

CHANNEL 2 is paired with BLIND 2

CHANNEL 3 is paired with BLIND 3

CHANNEL 4 (THE DESIGNATED GROUP CHANNEL) IS PAIRED WITH
BLIND 1, BLIND 2 and BLIND 3.

REMOTE OPERATION

-  Raises the blind
-  Stops the blind
-  Lowers the blind

STEP 8 - EXIT THE LIMIT SETTING MODE BY WAITING 30 SECONDS

Before programming another motor, we recommend powering off the
first motor (STEP 1). This will ensure the first motor is not effected
by the new programming of the second motor.

STEP 9 - DELETING A LIMIT SETTING

Move blind into one of your limit settings you wish to delete by
pressing the **UP/DOWN** button
(Please note you cannot delete the top limit)

Push and hold the **PROGRAM** button on the remote for 7 SEC
The blind jog after 1 SEC and will then jog again after 7 SEC

STEP 10 - ADDING A CHANNEL/ NEW REMOTE TO YOUR BLIND

Choose a Channel on your remote

Press the **SETTING** button on the motor head for 1 SEC
The blind will jog once.
Press the **UP** button on your remote, the motor will jog

STEP 11 - DELETE A CHANNEL FROM YOUR BLIND

Choose the Channel you wish to remove on your remote

Press the **STOP** button on your remote for 5 SEC, the motor will jog

Press the **PROGRAM** button on the back of your remote for 1 SEC
The motor will jog.

STEP 12 - FACTORY RESET YOUR MOTOR


Press the **STOP** button on your remote for 5 SEC, the motor will jog

Press and hold **PROGRAM** button on the back of your remote for 7 SEC
(within 10 SECONDS)
The motor will jog in 1 SEC and then will jog again after 7 SEC

PLEASE NOTE

If you have multiple blinds that you wish to program onto one channel
You will be required to power off each motor after programming has
been completed (STEP 1) and move on to the next motor.

Once all motors have been programmed, power on each motor (STEP 1)

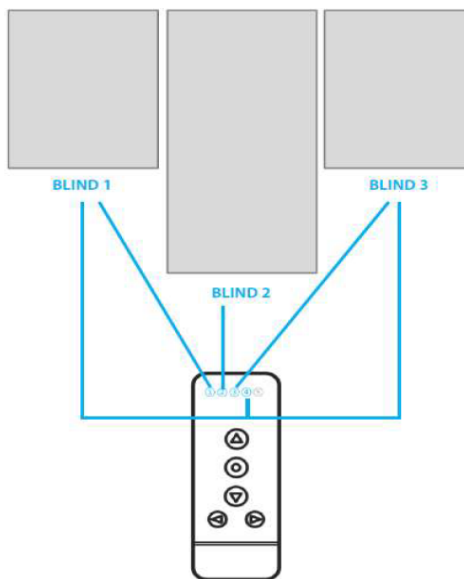

BATTERY (DC) MOTOR:



ELECTRIC (AC) MOTOR:



CHARGING (applicable to Battery motors only)

The MasterVue motor has a built in rechargeable Li-ion battery. Please charge when the motor stops working or when operation begins to slow down.

Plug the pin end into the charging cable on the motor head, and then insert the plug into the socket.

Charging time is 5 to 6 hours.

AVAILABLE REMOTE CONTROLS

1 Channel Remote:



6 Channel Remote:



16 Channel Remote:



REMOTE BATTERY

The MasterVue remote comes with a 3 Volt (CR2430) button battery.

Replace the battery by removing the small screw from the back of the remote and slide the back cover in up upward direction.

Please note: If the cover is removed before it is moved/slid in an upward direction, the internal clips will break.