

Bamboo Roller Installation Guide

Checklist: You will need the following to perform the installation.


- Drill with hammer function for masonry (with 5.5mm drill bit).
- Screwdriver (Phillips)
- Measuring tape
- Marker (pencil)
- Ruler (recommended)
- Step ladder
- Spirit level (recommended)
- Hammer (not required but ideal)
- Vacuum to clean dust from drilling
- Hacksaw (only required for 50mm that includes pelmet (Valance))

Hanging your blind:

Step1.

Before starting you need to decide if the blind is an Inside (Recess) or Outside (Facefix) blind installation. This will determine your blind position.

Remember if Inside (Recess) you should ensure the blinds will not be obstructed but obstructions like window handles or burglar bars for example.

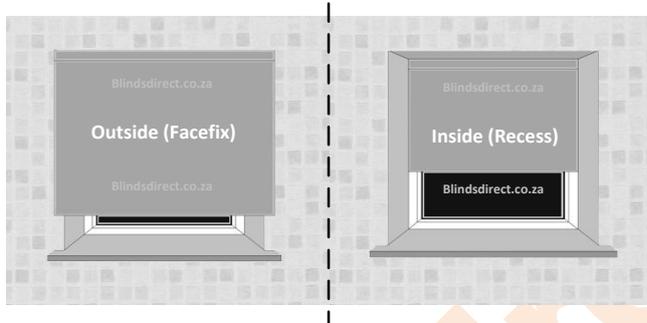


Step2.

Place the blind in fitting position. When fitting the brackets, you will need to leave at least 5cm (50mm) either side of controls.

Step3.

Inside window frame (Reveal fix)

Measure the distance that any handles protrude from the frame. Mark this measurement on the lintel and use it to position the back of the bracket. Mark the position of holes. Drill the holes. Then screw bracket to lintel using screws and raw plugs supplied.

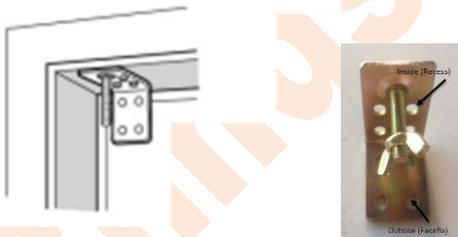

Or Outside window frame (Face Fix)

Position bracket and mark holes. Then drill the holes. Screw bracket in place. Use raw plugs if fitting to the wall.

Step 4.

Insert the Bamboo blind into the brackets, so that the front overlaps the bracket. Then fasten the wing nut.

