

Vertical Blind Installation Guide

Checklist: You will need the following to perform the installation.

- Drill with hammer function for masonry (with 5.5mm drill bit).
- Screwdriver (Phillips)
- Measuring tape
- Marker (pencil)
- Ruler (recommended)
- Step ladder
- Spirit level (recommended)
- Hammer (not required but ideal)
- Vacuum to clean dust from drilling
- Hacksaw (not required for 25mm Aluminium)

Note.

For wallboard or plaster: Use hollow wall anchors for added support (not supplied).


For concrete, stone, brick or tile: Use an appropriate drill bit (not supplied) and screws/plugs (provided).

For metal surfaces: Pre-drill holes before fastening the screws.

Hanging your blind:

Step1.

Before starting you need to decide if the blind is an Inside (Recess) or Outside (Facefix) blind installation. This will determine your blind position. Remember if Inside (Recess) you should ensure the blinds will not be obstructed but obstructions like window handles or burglar bars for example.

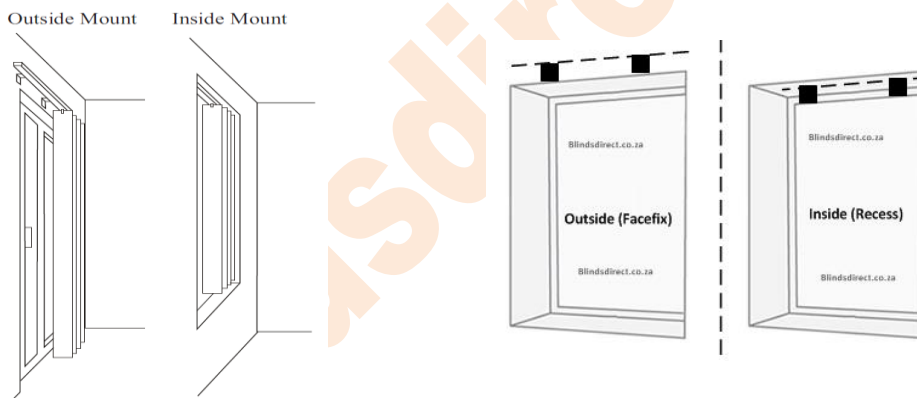


Step2.

Inside window frame (Reveal fix)

Measure the distance that any handles protrude from the frame. Mark this measurement on the lintel (top inside portion of window frame) and use it to position the back of the bracket. Mark the position of holes. Drill the holes. Then screw bracket into lintel using screws and raw plugs supplied.

Use mounting clips to secure headrail on the inside mounts. The centre of the mounting clip aligns with the centre of the louver carrier stem. Set mounting clips with a maximum space of 60cm apart from each other.

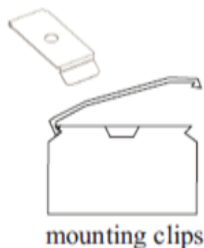


Outside window frame (Face Fix)

Standard wall brackets are adjustable and provide 5cm wall clearance.

Determine the height for the top of the bracket (measured from the floor) by adding 1/2" to the blind height including the headrail. When installed, louvers will clear the floor.


Place the first bracket directly over the corner of the window with a maximum space to 60cm between brackets. Adjust the bracket so louvers clear all obstructions.

Mark the drilling positions. Then drill the marked positions. Screw bracket in place. Use raw plugs if fitting to the wall.




Step 3.

Mount the brackets on the headrail then snap into place. To remove headrail, simply push the release lip up with a screwdriver.

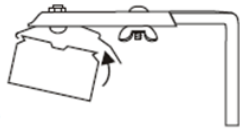


Step 4.

Attach the louvers, push the louver up into the carrier stem, then straight down to lock into place. Channel panel louvers attach the same way.

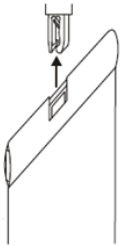

Step 5.

Pull the cords to ensure that the blind traverses smoothly in both directions. CAUTION: Do not traverse the Blinds with the Louvers in the closed position.

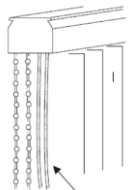

Step 6.

Pull the beaded chain once in each direction, rotating the louvers from front to back. This step will automatically align all of the louvers.