

Aluminium, Plaswood, Basswood and Roman Blind Installation Guide

Checklist: You will need the following to perform the installation.

- Drill with hammer function for masonry (with 5.5mm drill bit).
- Screwdriver (Phillips)
- Measuring tape
- Marker (pencil)
- Ruler (recommended)
- Step ladder
- Spirit level (recommended)
- Hammer (not required but ideal)
- Vacuum to clean dust from drilling
- Hacksaw (not required for 25mm Aluminium)

Note.

For wallboard or plaster: Use hollow wall anchors for added support (not supplied).


For concrete, stone, brick or tile: Use an appropriate drill bit (not supplied) and screws/plugs (provided).

For metal surfaces: Pre-drill holes before fastening the screws.

Hanging your blind:


Step1.

Before starting you need to decide if the blind is an Inside (Recess) or Outside (Facefix) blind installation. This will determine your blind position. Remember if Inside (Recess) you should ensure the blinds will not be obstructed but obstructions like window handles or burglar bars for example.

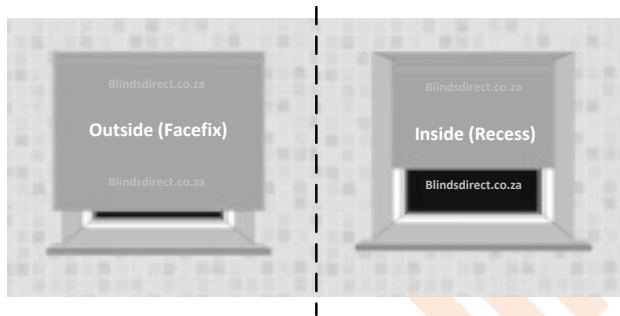

Step2.




Place the blind in fitting position and tilt forward to show ladder controls. When fitting the brackets, you will need to leave at least 5cm (50mm) either side of controls.

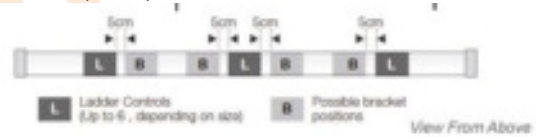

Step3.

Inside window frame (Recess fix)

Measure the distance that any handles protrude from the frame. Mark this measurement on the lintel (top inside portion of window frame) and use it to position the back of the bracket. Mark the position of holes. Drill the holes. Then screw bracket into lintel using screws and raw plugs supplied.

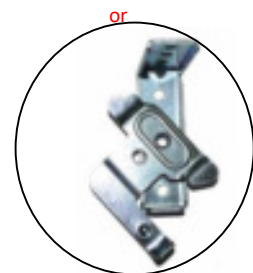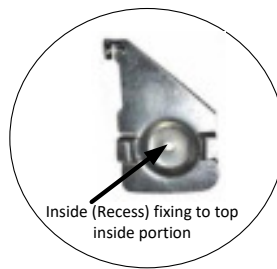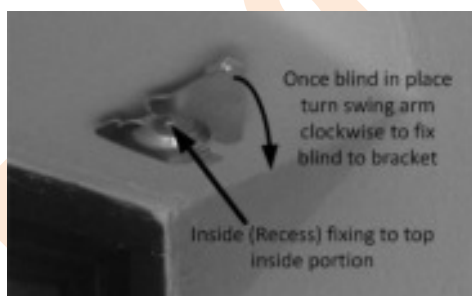

This brackets above are used for the 50mm Venetain blinds.

Outside window frame (Face Fix)

Position bracket with swing arm facing towards you, then proceed to mark drilling positions. Then drill the marked positions. Screw bracket in place. Use raw plugs if fitting to the wall.



Step 4. (Does not apply to 25mm aluminium blinds)

Place pelmet clips (Valance clip) provided onto the head rail of the blind, before mounting into the brackets.

Please note pelmet clips are not provided for 25mm Aluminium range.


Only 50mm Venetian Blinds will have a Pelmet/Valance.

If face fix (Outside) then just simply clip the side pelmets (Returns) onto the main pelmet (Valance) then just clip onto the head rail with the pelmet clips provided.

If Recess fit (Inside) pelmets are cut 20mm longer than the headrail. Client will need to trim for perfect fit.




FOR THE 25mm Venetian Blinds. Brackets and installation are as follows.

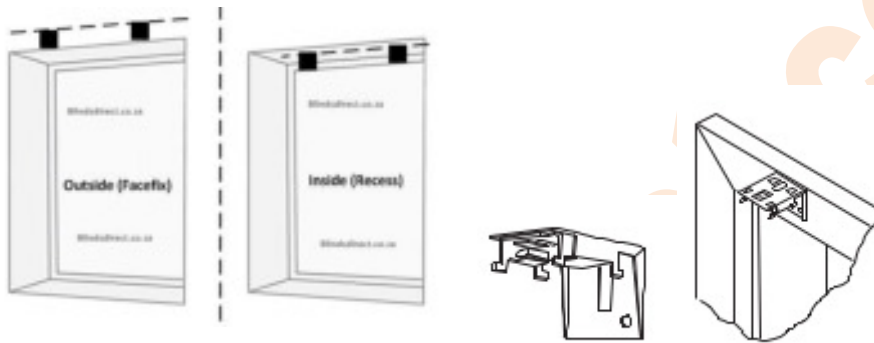


Step 1.

Slip the headrail onto the front plastic piece of the bracket, push inwards and twist the back of the headrail upwards in one motion. The headrail will snap into position.

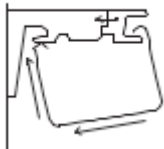

Step 2.

Use string cord control A to lift and lower the blind. The wand control B turns to adjust the blind into open and closed position.

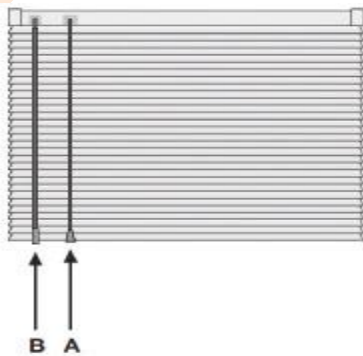

Step 3.

Install your child safety cleat device onto the wall near your controls; recommend you mount in a position out of children or animal reach.



Blindsdirect.co.za