

Blinds Measuring Sheet

	Description	Inside (Recess)		OR	Outside (FaceFix)		Controller		
		Shortest Width	Longest Drop (Vertical & Panel Shorest Drop)	Windows frame width +100mm	Window frame drop + 100mm	Left	Right	Qty	
Room1		mm	mm		+100= mm	+100= mm			
Room2		mm	mm		+100= mm	+100= mm			
Room3		mm	mm		+100= mm	+100= mm			
Room4		mm	mm		+100= mm	+100= mm			
Room5		mm	mm		+100= mm	+100= mm			
Room6		mm	mm		+100= mm	+100= mm			
Room7		mm	mm		+100= mm	+100= mm			
Room8		mm	mm		+100= mm	+100= mm			
Room9		mm	mm		+100= mm	+100= mm			
Room10		mm	mm		+100= mm	+100= mm			


Measuring process explained:

- 1) Input a description for the room or location for the blind.
- 2) Decide if you require Outside (Facefix) or Inside (Recess).
- 3) Measure according to our easy to follow guide and then capture your measurements. (Refer to Page 2)
- 4) Select if you require left or right hand controller.
- 5) Input the number of blinds required.
- 6) Go to Blindsdirect.co.za and using made-to-measure input the captured information.


Visit our website for How To Video's

Types of Blinds

Blinds come in two different kinds, which will suit different needs. Do you want the blind to fit inside the window (Recess) or outside (Facefix)?

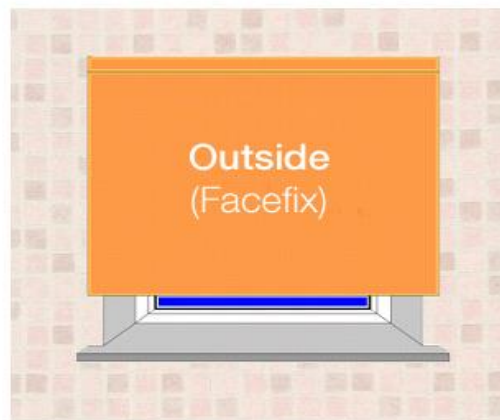

Outside (Facefix) blinds are easier to install, ideal if you want to hide features around the window and does not require exact measuring.

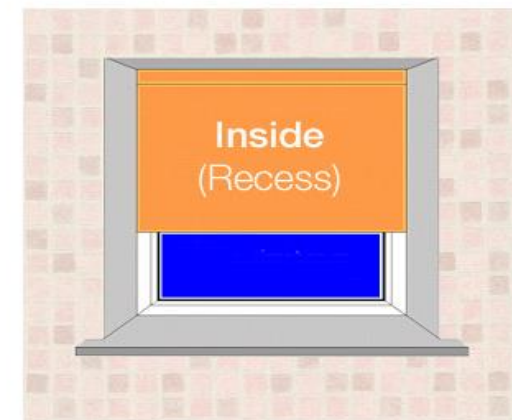

Inside (Recess) blinds provides a neat appearance, but requires exact measuring and a top recess large enough to accommodate the size of the head rail.

Get a blinds quote in 4 easy steps

Step1

Select your Made to measure blind & size

Step2

Select your colour/fabric & if inside or outside blind

Step3

Input dimensions

Enter your dimensions in millimeters


Width (mm)

Drop (mm)

Step4

Click

CALCULATE

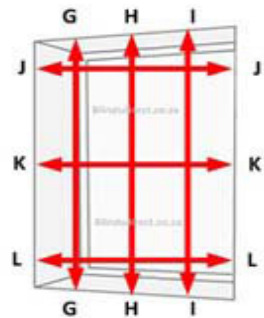

How to measure Inside (Recess) blinds:

- Ensure that the recess your blinds is going into is not obstructed in any way so the blind can hang freely when fully extended. Look out for protruding window handles and tiles!
- Verify you have 70mm inside top wall recess available for the blind head rail to be mounted onto – refer to illustration to the left.
- Measure at various places (J,K,L) as illustrated and input the shortest width dimension.
- Measure at various places (G,H,I) as illustrated and input the longest drop dimension. **(Shortest Drop required for Vertical & Panel blinds)**

Note: We will make your blind to fit into the recess perfectly. Do not make any deductions to the measurements as our factory will make the allowances required for recessed blinds.




Tips!

- We recommend using a metric metal tape measure and take the exact measurements to the millimetre.
- Always double check your measurements.

Need Help?

If you require assistance, feel free to talk to us now via online chat or call 087 8026 027, or you can email us at info@blindsdirect.co.za

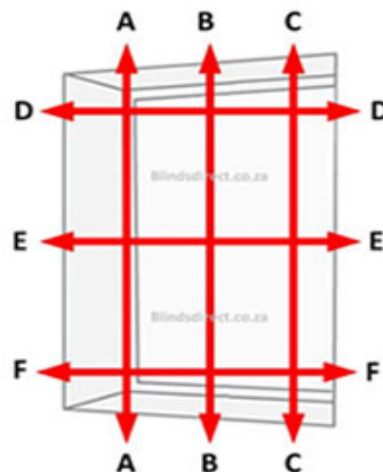

How to measure Outside (Facefix) blinds:

- Decide how much you want to overlap the blind on all sides - we recommend this should be at least 50mm - 100mm each side in most instances.
- Carefully measure the width of D, E and F (see the diagram) and the drop from A, B and C.

Visit our other stores

